

SECTION IV: PULLING TOOLS

Type 'ROTGU' Shear-Up Adapter Tool Assembly: 1.12" - 7.00"

Rebco Types 'ROTGU' Shear-Up Adapter is used with Type 'ROTGS' Pulling Tool when the need for jar up is required to release the Sub-Surface device.

See Type 'ROTGR' Pulling/Running Tool Assembly (PRODUCT 40).

TECHNICAL DATA					
NOMINAL SIZE	1 1/8"	1 1/4"	1 1/2"	2"	2"
ASSEMBLY NUMBER	40051611200	40051612500	40051615000	40051617800	40051618700
ENGINEERING DATA:					
MAXIMUM OD	1.10"	1.15"	1.47"	1.75″	1.81″
PIN THREAD CONNECTION	5/8" - 11	5/8" - 11	15/16" - 10	15/16" - 10	15/16" - 10
FISHING NECK OD	.750"	1.000"	1.187"	1.375"	1.375"
CORE NUT THREAD	5/8" - 11	5/8" - 11	15/16" - 10	15/16" - 10	15/16" - 10
LENGTH	7.50"	7.69"	9.37"	9.37"	9.37"
MATERIAL	Alloy	Alloy	Alloy	Alloy	Alloy



TECHNICAL DATA					
NOMINAL SIZE	2 1/2"	2 1/2"	3″ *	3" – 4"	
ASSEMBLY NUMBER	40051621800	40051623100	40051627530	40051631202	
ENGINEERING DATA:					
MAXIMUM OD	2.12"	2.25"	2.72"	2.72"	
PIN THREAD CONNECTION	15/16" - 10	15/16" - 10	1 1/16" - 10	1 1/16" - 10	
FISHING NECK OD	1.750"	1.750"	2.313"	2.313"	
CORE NUT THREAD	15/16" - 10	15/16" - 10	1 1/16" - 10	1 1/16" - 10	
LENGTH	9.88"	9.87"	10.31"	10.31"	
MATERIAL	Alloy	Alloy	Norm Alloy	Alloy	

NOTE: * 3" 'ROTGU' Shear Up Adapter (40051627530) is a Special Tool for H₂S Service




Page IV-1



SECTION IV: PULLING TOOLS

Type 'ROTGU' Shear-Up Adapter Tool Assembly:


TECHNICAL DATA				
NOMINAL SIZE	5"	7"	7"	
ASSEMBLY NUMBER	40051645600	40051658700	40051659600	
ENGINEERING DATA:				
MAXIMUM OD	3.60"	5.83"	5.88"	
PIN THREAD CONNECTION	1 1/16" - 10	1 1/16" - 10	1 1/16" - 10	
FISHING NECK OD	3.125"	2.313"	2.313"	
CORE NUT THREAD	1 1/16" - 10	1 1/16" - 10	1 1/16" - 10	
LENGTH	15.19"	15.66"	15.66"	
MATERIAL	Alloy	Alloy	Alloy	

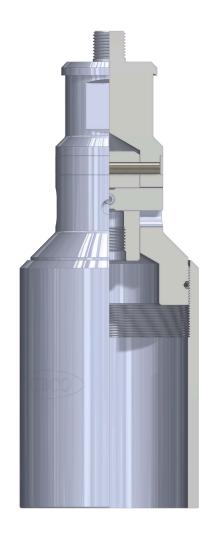




SECTION IV: PULLING TOOLS

Fig 2 - Comparative of 'ROTR_' and 'ROTS_' Pulling Tools

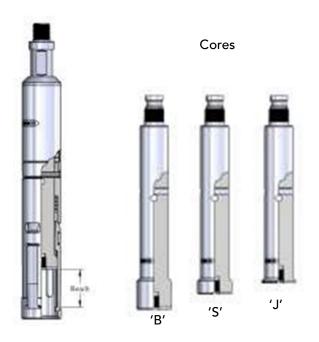

Series Type: 'ROTRB', 'ROTRS' and 'ROTRJ'

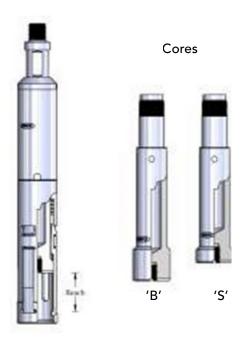

Series Type: 'ROTSB' and 'ROTSS'

Chart: Pulling Tool Selection Guide

FISHING NECK	PUL	LING TOOL TYPE: SE	IAD TO DELEASE		
TYPE TO ENGAGE	SHEAR UP	SHEAR DOWN	SPECIAL	JAR TO RELEASE	
	'ROTR_'		'RQ'		
	'ROTJU_'			UP	
EXTERNAL	'ROTB_'				
		'ROTS_'	'SQ'	DOWN	
		'ROTJD_'			
		'RH'			
			'ROTSSJ'	DOWN w/Adapter	
			'RMF'	MODE: Up/Down	
	'ROTGR'			UP w/Adapter	
INTERNAL	'ROTGRL'				
		'ROTGS'		DOWN	
		'ROTGSL'		DOWN	