

SECTION IV: PULLING TOOLS

Type 'ROTSS' Pulling Tool (Medium Reach) Assembly: 1"- 4.00"

Rebco Types 'ROTSS' Pulling Tool is designed to run and retrieve sub surface equipment with external fishing neck. The tool can be released by jarring down.

TECHNICAL DATA								
NOMINAL SIZE		1 1/2"	2"	2 1/2"	3"			
ASSEMBLY NUMBER		4014141500	4014142000	4014142500	4014143001			
ENGINEERING DATA:								
MAXIMUM OD		1.43"	1.77″	2.18"	2.73"			
PIN THREAD CONNECTION		15/16" - 10	15/16" - 10	15/16" - 10	1 1/16" - 10			
FISHING NECK OD		1.187"	1.375″	1.375″	2.313"			
BOTTOM THREAD (PRONG)		3/8" - 16	1/2" - 13	1/2" - 13	5/8" - 11			
WILL ENGAGE FISHING NECK OD		1.187"	1.375"	1.750″	2.313"			
REACH		1.78"	2.03"	1.75"	1.50"			
LENGTH		13.1"	15.89"	16.36"	17.5″			
MATERIAL		Alloy	Alloy	Alloy	Alloy			
ACCESSORIES	PINNING TOOL ASS'Y	16711003	16711004	16711004	16711005			
	RELEASING TOOL	167004	167003	167006	167007			
	CORE WRENCH	167023	167024	167024	167025			
	CORE NUT WRENCH	167012	167011	167011	167011			





SECTION IV: PULLING TOOLS

Type 'ROTSS' Pulling Tool (Medium Reach) Assembly:


TECHNICAL DATA							
NOMINAL SIZE		3"	3 1/2"	4"			
ASSEMBLY NUMBER		4014143000	4014143500	4014144000			
ENGINEERING DATA:							
MAXIMUM OD		2.84"	3.115"	3.670"			
PIN THREAD CONNECTION		1 1/16" - 10	1 1/16" - 10	1 1/16" - 10			
FISHING NECK OD		2.313"	2.313"	2.313"			
BOTTOM THREAD (PRONG)		5/8" - 11	5/8" - 11	1 1/4" - 12			
WILL ENGAGE FISHING NECK OD		2.313"	2.750"	3.125"			
REACH		1.50"	1.75″	1.50"			
LENGTH		17.5″	18.0"	18.0"			
MATERIAL		Alloy	Alloy	Alloy			
ACCESSORIES	PINNING TOOL ASS'Y	16711005	16711003	16711006			
	RELEASING TOOL	167007	167008	167009			
	CORE WRENCH	167025	167023	167026			
	CORE NUT WRENCH	167011	167011	167011			






SECTION IV: PULLING TOOLS

Fig 2 - Comparative of 'ROTR_' and 'ROTS_' Pulling Tools

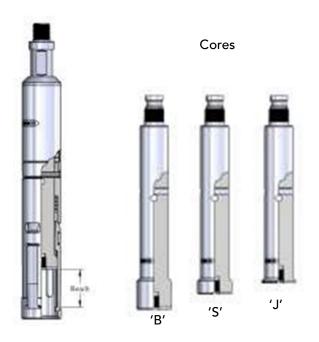

Series Type: 'ROTRB', 'ROTRS' and 'ROTRJ'

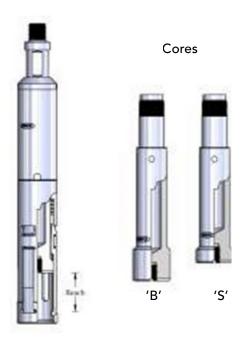

Series Type: 'ROTSB' and 'ROTSS'

Chart: Pulling Tool Selection Guide

FISHING NECK	PUL	LING TOOL TYPE: SE	IAD TO DELEACE		
TYPE TO ENGAGE	SHEAR UP	SHEAR DOWN	SPECIAL	JAR TO RELEASE	
	'ROTR_'		'RQ'	UP	
	'ROTJU_'				
	'ROTB_'				
EVTEDNIAI		'ROTS_'	'SQ'	DOWN	
EXTERNAL		'ROTJD_'			
		'RH'			
			'ROTSSJ'	DOWN w/Adapter	
			'RMF'	MODE: Up/Down	
	'ROTGR'			UP w/Adapter	
INTERNAL	'ROTGRL'				
INTERNAL		'ROTGS'		DOWN	
		'ROTGSL'		DOWN	