



## SECTION III: RUNNING TOOLS

### Type 'JU' (Jay) Unlatching Running Tool

**Rebco** Type 'JU' Unlatching Running Tool is an accessory tool used to set Instruments into the well bore on top of the pre-set stop. See [Section VI - BHP Tools](#) for more details.

#### To Run:

Attach the 'J' Head to the Instruments (Recorders). The Running Tool's 'JAY' slot allows the 'J' Head to be unlatched by the weight of the tool string. 'J' Heads fishing neck is used to retrieve the instruments at later date with appropriate Pulling Tool, (See [Section IV, PRODUCT CODE 40](#)).

| TECHNICAL DATA |                 |                           |                                          |              |                 |        |
|----------------|-----------------|---------------------------|------------------------------------------|--------------|-----------------|--------|
| NOMINAL SIZE   | ASSEMBLY NUMBER |                           | ENGINEERING DATA: (For the Running Tool) |              |                 |        |
|                | RUNNING TOOL    | For 'J' HEAD with FN Size | MAX OD                                   | PIN THREAD   | FISHING NECK OD | LENGTH |
| 1 1/2"         | 4107161500      | 1.000"                    | 1.19"                                    | 15/16" - 10  | 1.187"          | 15.19" |
| 2"             | 4107162000      | 1.187"                    | 1.50"                                    |              | 1.375"          |        |
|                | 4107162001      | 1.375"                    |                                          |              |                 |        |
| 3" - 3 1/2"    | 4107162500      | 1.750"                    | 2.25"                                    |              | 1.75"           | 15.62" |
| 4" - 4 1/2"    | 4107163000      | 2.313"                    | 2.87"                                    | 1 1/16" - 10 | 2.313"          | 16.0"  |

'J' Head(s) is ordered separately

