




SECTION III: RUNNING TOOLS

Type 'F' Running Tool

Rebco Type 'F' Running Tool is used to set various types of sub-surface Tools; mainly tools that have external fishing necks which are pinned through the ID.

Typical Tools that can be set with Type 'F' Running Tool are: Collar Stops and Tubing (Slip) Stops;

(see [PRODUCT CODE 110](#) and [164](#) respectively).

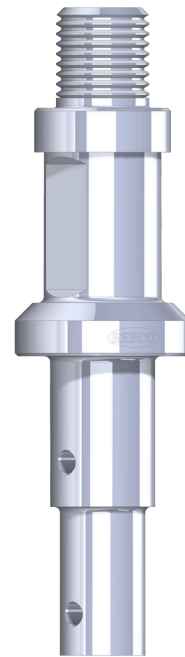

TECHNICAL DATA								
NOMINAL SIZE	PART NO	USED with TOOL TYPE		ENGINEERING DATA:				
		COLLAR STOP	SLIP STOP	MAX OD	PIN THREAD	FISHING NECK OD	FOR NECK ID	LENGTH
		(PRODUCT CODE 33)	(PRODUCT CODE 164)					
1 1/4"	41251	11025201	16414141250	1.12"	5/8" - 11	1.000"	.47"	4.50"
1 1/2"		11025202	16414141500	1.37"	15/16" - 10	1.187"	.62"	
1 3/4"		110252012	16414141750					
2 1/16"								
2"	41252	11025203				1.375"	.87"	6.43"
	4125200		16414142000			1.187"	.71"	5.37"
2 1/2"	41252	11025204		1.75"	1.375"	1.12"	6.43"	
2 1/2"	4125250		16414142500			1.05"	5.88"	
3"	41253	11025205				2.25"		
		11025206						
3 1/2"	4125350		16414143500	2.31"	1 1/16" - 10	1.750"	1.50"	6.00"
4"	41253	11025207		2.25"	15/16" - 10	1.375"	1.62"	5.88"
	4125450		16414144500	3.50"	1 1/16" - 10	2.313"	2.365"	6.63"